

Ultra Red Technologies Face Shield Assembly

Items Required

1. 3D Printed Frame
2. Clear A4 PVC Cover
3. Hole Punch


Step 1 – Set the hole punch to the A6 Setting



Step 2 – Punch two holes along the long side of the Clear PVC sheet.



Step 3 – Turn the sheet over and punch two more holes onto the same side as the holes in Step 2, but from the other side.

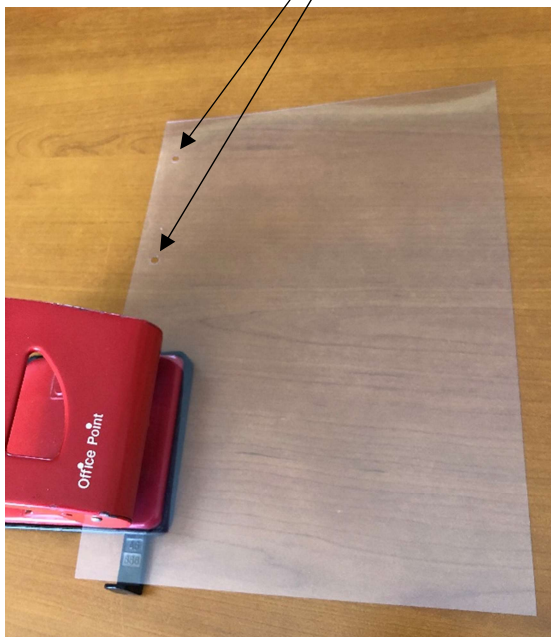

Step 4 – Assemble the Clear PVC cover onto the 4 tabs (circled in red) on the 3D Printed frame.

